

Air SyncHD

1080p Video/Audio Wireless Transmission Kit

BV-2822



Quick Installation Guide

Part 2 Quick Installation Description

Hardware Installation

BV-2822 transmitter to your HD devices:
You can connect 6 video sources to the transmitter at the same time; four with the HDMI connection and two with component connection.

 
- 1 Use the HDMI cable to connect A/V HD devices which support HDMI OUT connector to the BV-2822 transmitter's HDMI IN connector.
- 2 Connect HD devices to your BV-2822 transmitter using the Component Video/ Audio L/R cables to connect from the Y/Pb/Pr/Audio L/R OUT connectors of HD devices to the Y/Pb/Pr/Audio L/R IN on .
- 3 Use another HDMI cable to connect one end to the BV-2822T via "HDMI OUT", and the other end to the HDTV's "HDMI IN" port, only if the loop-through feature is desired.
- 4 Plug in power adapter to BV-2822T transmitter, it'll boot up automatically.

BV-2822R receiver Connections


- 1 Connect the "HDMI OUT" port of the BV-2822R receiver to the "HDMI IN" port of the HDTV with an HDMI cable.
- 2 Connect the power adapter to the receiver.



Part 1 Package Content and Connectors

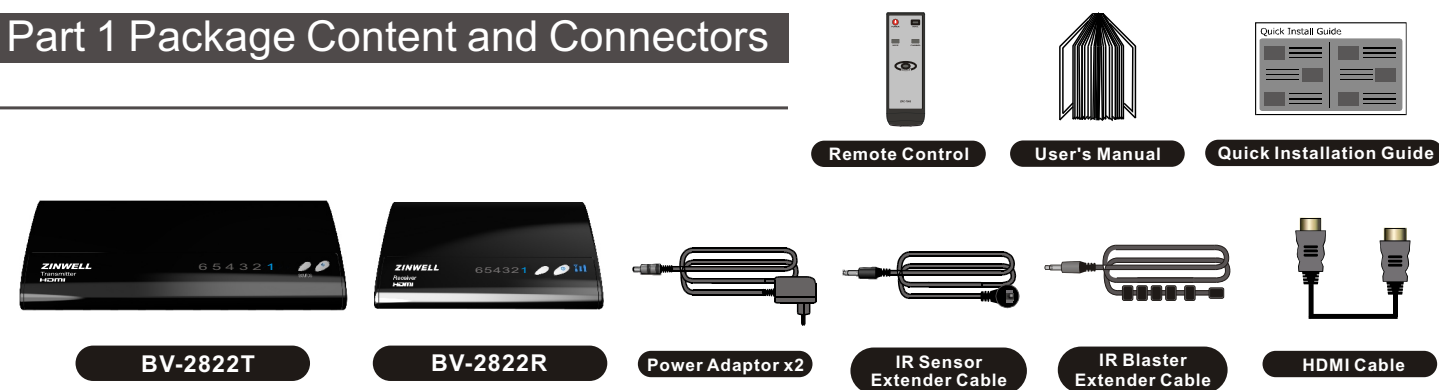


Rear View of ZWD-2822 Transmitter

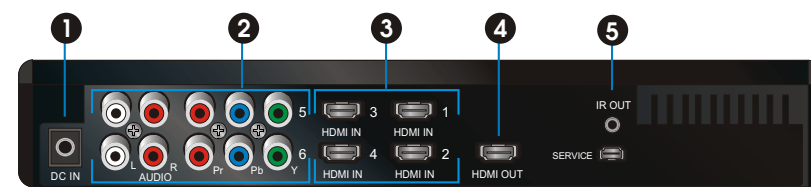 

- 1 DC IN
- 2 Y/Pb/Pr and Audio L/R IN
- 3 HDMI IN
- 4 HDMI OUT
- 5 IR OUT

 Rear View of ZWD-2822 Receiver

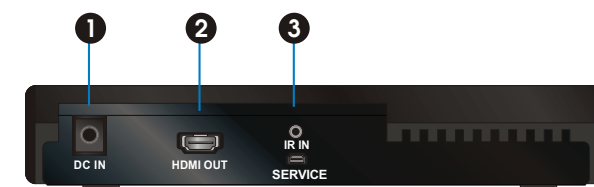

- 1 DC IN
- 2 HDMI OUT
- 3 IR IN

 
Part 3 Boost Video Transmission Range

Press the "WIDE" button on the remote control to enable to "WIDE" mode for longer distance transmission (1080i content only under WIDE mode); suitable for multi-room A/V transmission, or transmission between different floors.



Part 4 IR Blaster and Extender Setup

If the Infrared (IR) Blaster & Sensor (included) are connected to the BV-2822T and BV-2822R so you can point hand-held remote controls of your HD A/V equipment at the BV-2822R (receiver) or at your HDTV instead of at the A/V equipment. The transmission distance is 66 feet, line-of-sight.

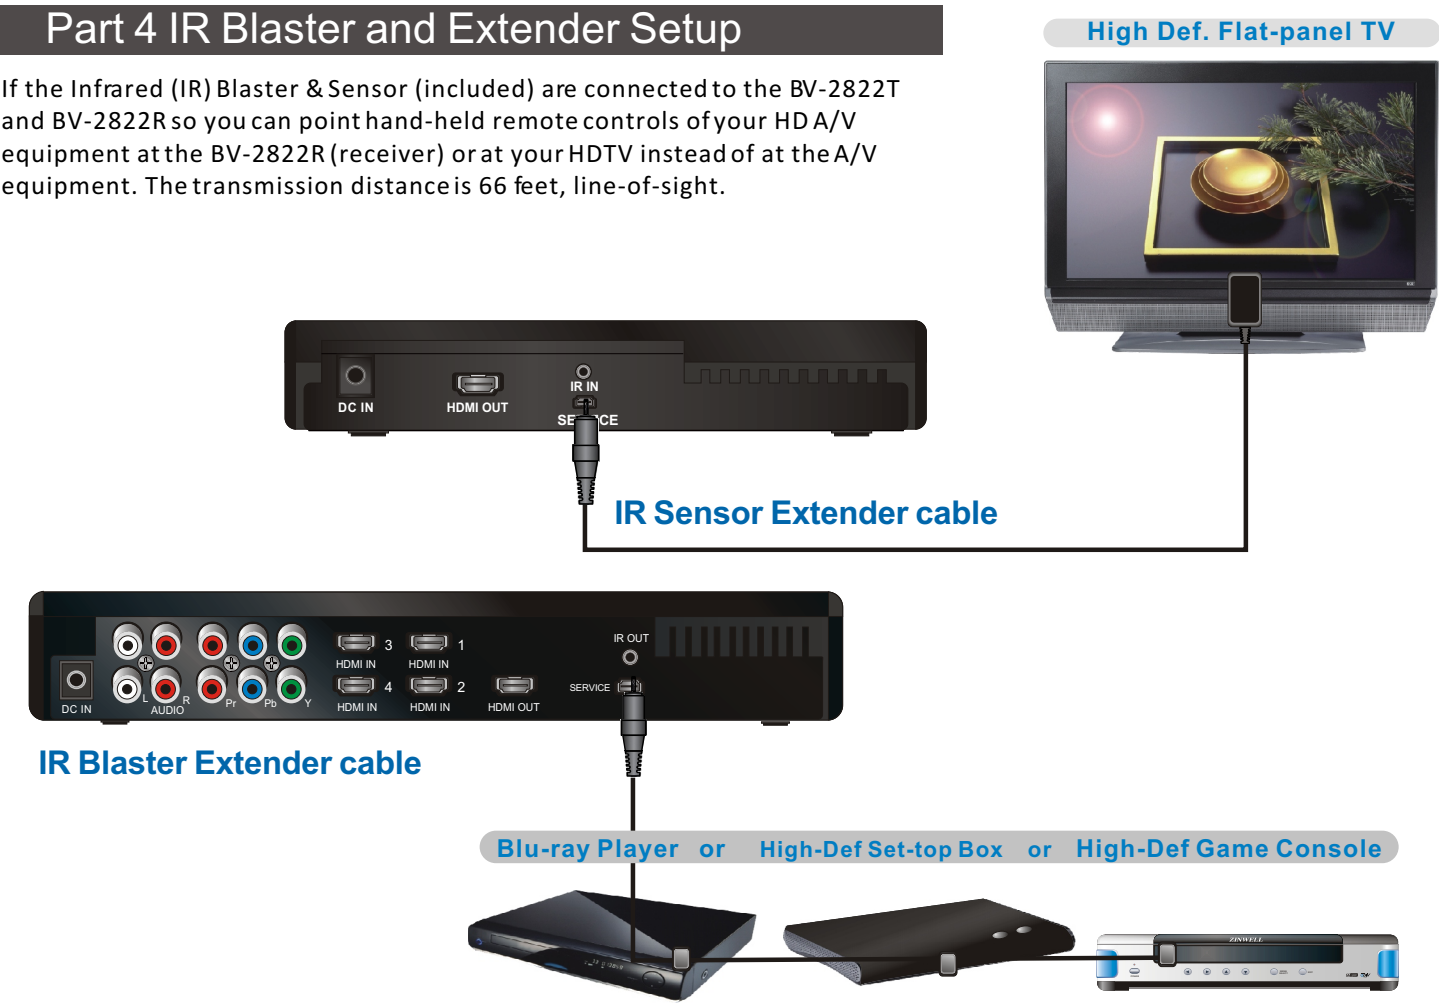

Part 6 Operation

Activate the BV-2822 and Set up the Link

Press the **POWER** button on the remote control or on the top of the BV-2822R and BV-2822T to turn on the transmitter and receiver when both **POWER** LEDs of transmitter and receiver are lit in red.



 
Power on your TV set and go to the source menu under the settings menu of your HDTV set. Then select the HDMI input to which the BV-2822 receiver is connected.



Press the **SOURCE** button on the remote control or on the top of the BV-2822R (receiver) to select the input source, until available video/audio is shown on the TV screen. If all operation is normal, the **POWER** LED and **SOURCE** LED will be lit in solid blue, and the user can press the **INFO** button on the remote control to check the status of signal quality and A/V source selected.


Note :

The wireless link might require 80 seconds to connect between transmitter and receiver, and show video on the TV screen. Please be patient and wait for a while.

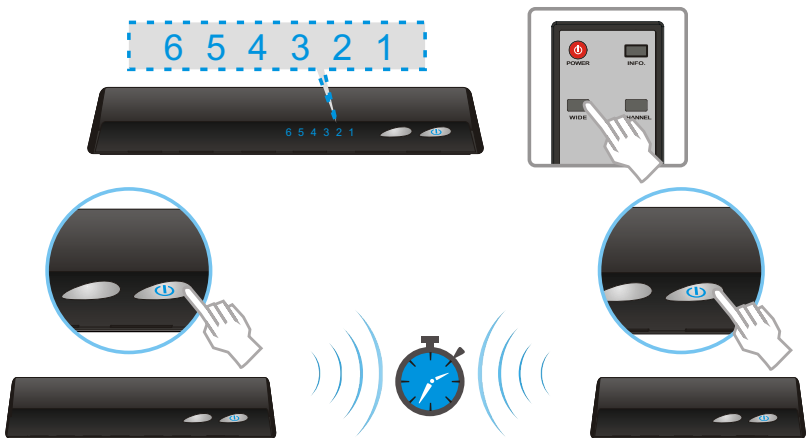

Part 5 Remote Control Unit Instruction

 Place the two AAA batteries into the remote control.

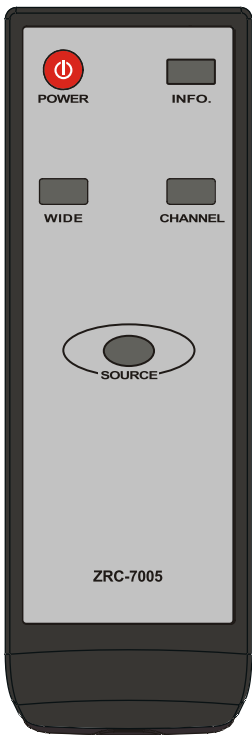

Button	Function Description	Operation
POWER	Press to turn the BV-2822 Transmitter/Receiver on/off. User need to pointing at BV-2822T & BV-2822R both to boot up when both POWER LEDs lit in red.	Press it pointing at the BV-2822R to enter the "Standby Mode" and the loop-through connection is on; press it when pointing at the BV-2822T to enter the "Standby Mode" and the loop-through connection is off.
INFO.	Press to display "Channel", "Source", "Resolution", "WIDE mode" and "Signal Quality"	Press once to display the current status. Press again to exit OSD. During INFO. OSD displayed, press SOURCE button to adjust the clock phase if necessary.
SOURCE	Press this button to switch audio/video sources connected to the BV-2822T.	Press to go to the next input source. Users can see the current setting on the OSD.
CHANNEL	Press this button to change wireless channels manually if the user experiences video noise.	Press once to display the current "Channel" status. Press again within 5 seconds to switch to another channel, and the channel number will be displayed on the OSD.
WIDE (1080i content only)	Press this button to enable the "WIDE" mode to boost transmission distance. Up to 100 feet (1080i content only)	Press this button to enable and disable WIDE mode. Press again within 5 seconds to enable WIDE mode, and the status will be displayed on the OSD.

NOTE:

If you have electronic devices such as cordless phones, wireless AC points/routers operating in the 5GHz band and near the BV-2822, the audio/video quality on the display or TV may suffer. Press the "CHANNEL" button twice on the remote control to switch to an appropriate channel for the BV-2822.



Part 7 Limited Warranty

This limited warranty (hereinafter the **Warranty**) is valid for the BV-2822 (hereinafter the **Product**). The **Warranty** is only valid in the country where the **Product** was originally purchased.

- The **Warranty** only covers manufacturing defects, and excludes defects caused by the inappropriate use or storage of the **Product**.
- The **Warranty** is issued by Xpike Innovation, Inc. to the end purchaser (hereinafter the **Customer**) of the **Product**.
- In accordance with the **Warranty**, the **Customer** has a sole claim to demand repair or replacement of the **Product** but may not assert claims or seek compensation against the manufacturer/retailer for further losses (including, but not limited to, the indirect loss of data or profit).
- The **Warranty** provides coverage over a period of 12 months, commencing from the initial purchase date of the **Product** by the **Customer** of Xpike Innovation. Subsequent changes of ownership do not extend the warranty period.
- The **Warranty** is valid with the proviso that the **Product** is shipped to Xpike Innovation within the warranty period. In the event of any faults or defects with the **Product**, it must be shipped back to Xpike Innovation. Products will be repaired or exchanged at Xpike Innovation's own discretion. The warranty period is not extended for any repaired or replaced **Products**. Exchanged parts are the property of Xpike Innovation, Inc.
- The **Warranty** is valid solely on the condition that the original proof of purchase issued is presented with the **Product**.

brite-View, the brite-View logo, are trademarks of Xpike Innovation Inc., registered in USA.

For detailed operating instructions, please visit www.brite-view.com to download the user manual.

Email service@brite-view.com or visit www.brite-viewforum.com for tech support.